

Solenoid Replacement

Stop or Place The N-300 in Stand-By Mode




Close Valve V16



Disconnect Solenoid Vent Hoses by Pushing in on Fitting Release Ring & Pull Hose Out



Hoses Disconnected

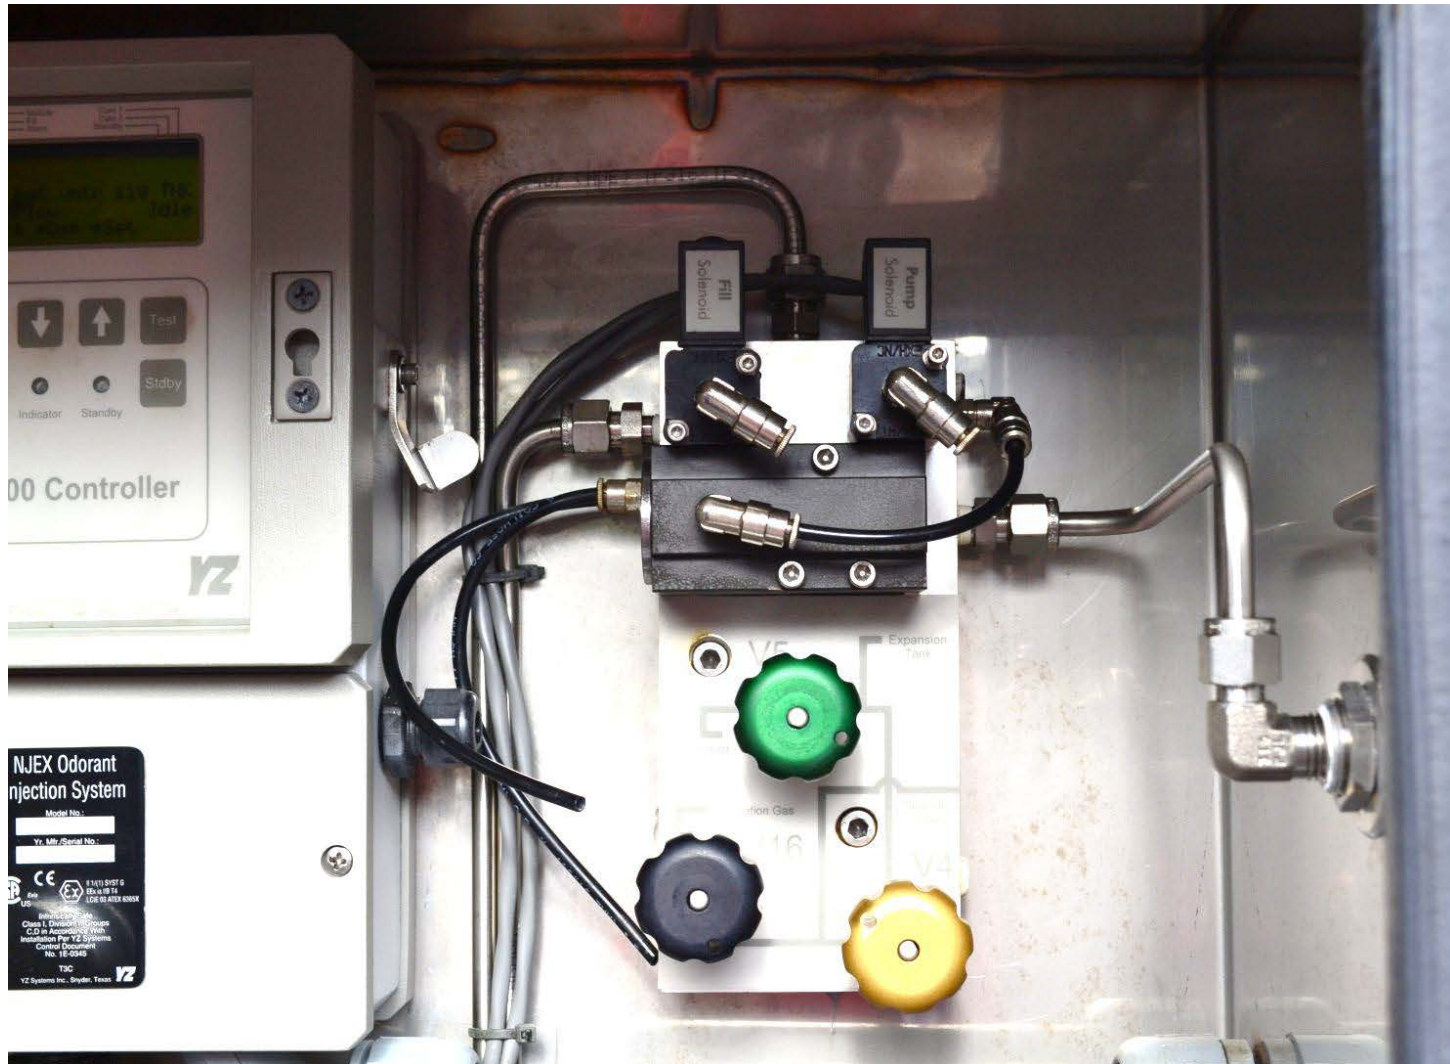

Remove Allen Screws (2) per Solenoid



Remove Old Gasket Which May Stay on Manifold or Solenoid





Remove Cable Plug Security Screw & Unplug Solenoids




Remove Vent Fittings and Install on New Solenoids



Reinstall Cable Plug & Security Screws



Install Gasket

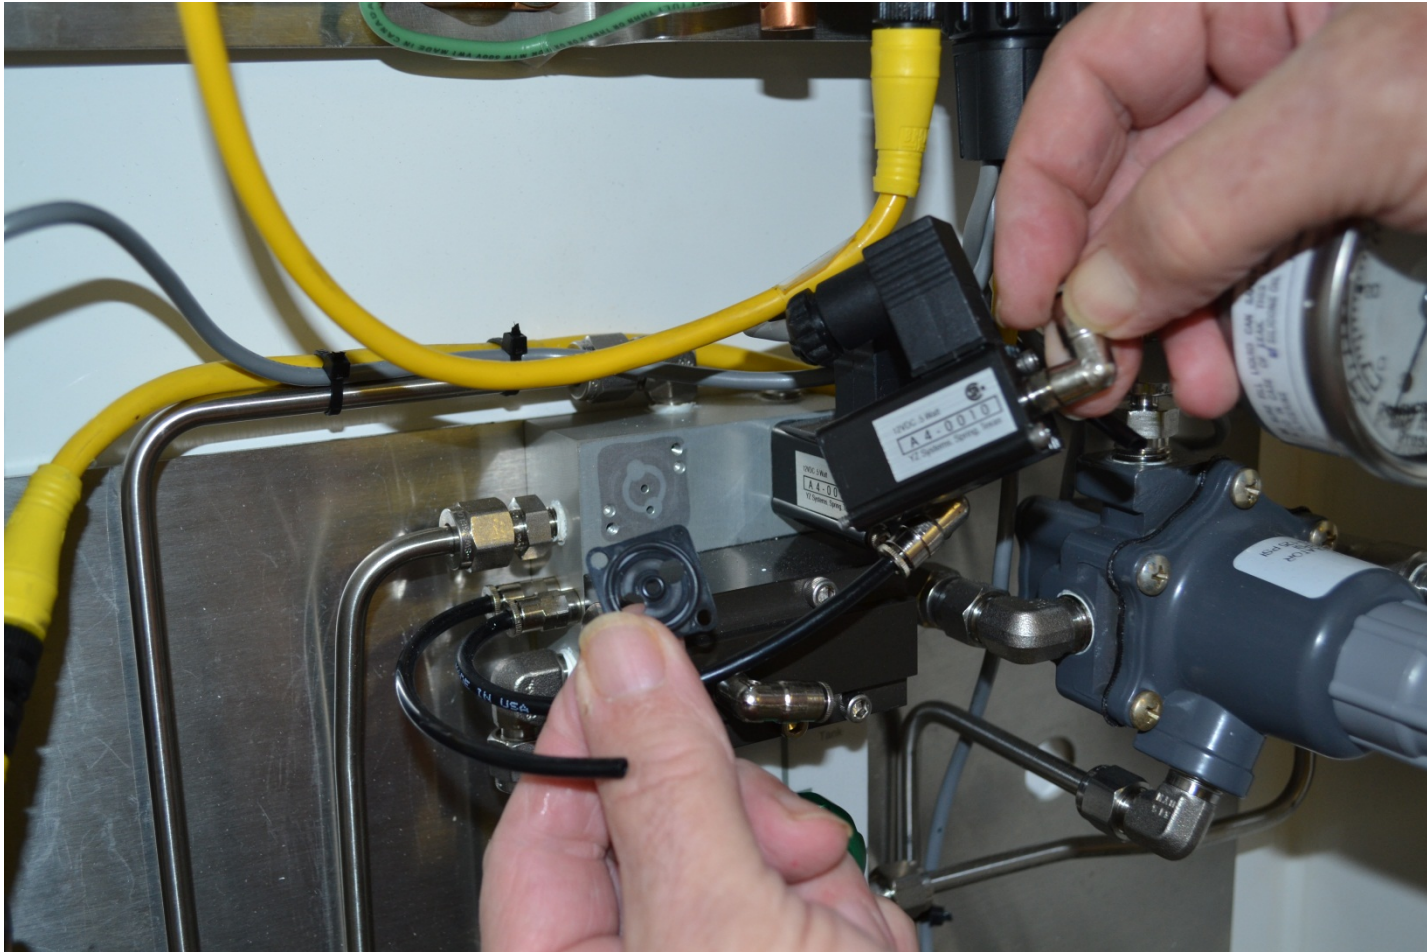

Gasket Installed on Solenoid with Screws



Attach Solenoid to the Manifold




Pump Solenoid Installed on The Right Side



Install Fill Solenoid on The Left



Reconnect Vent Hoses by Pushing Them into Fitting

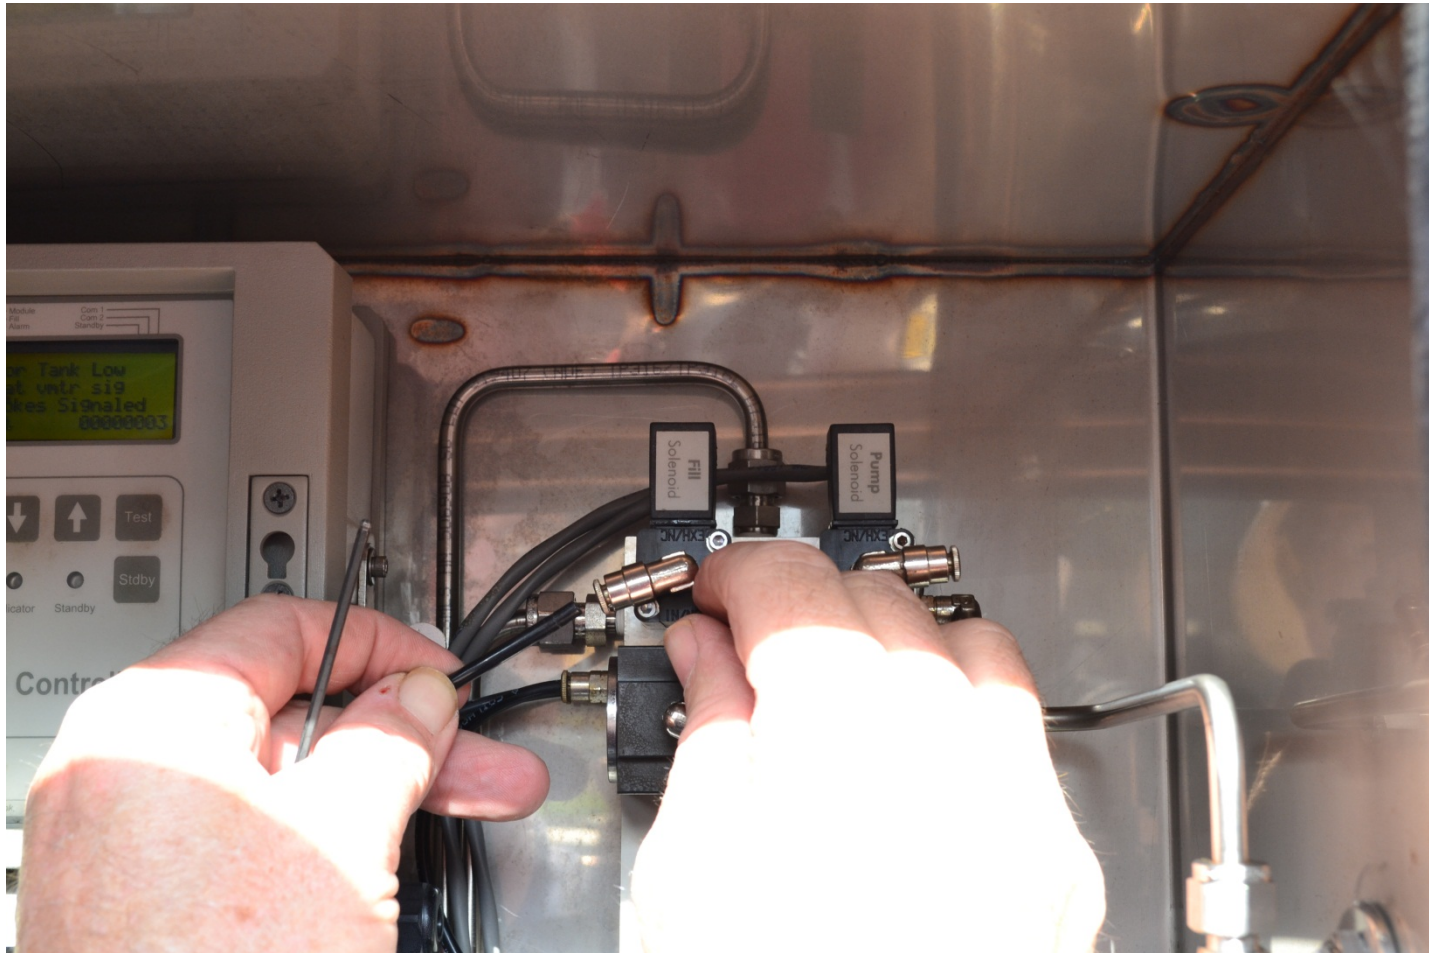

Open V16 Fully



Restart The NJEX System

