

### NJEX System Forward Purge

## Stop The System

- Using The Down Arrow Key on The N-300 Scroll until you see STOP in the lower left corner.
- Press Stop (Select/Enter Key)

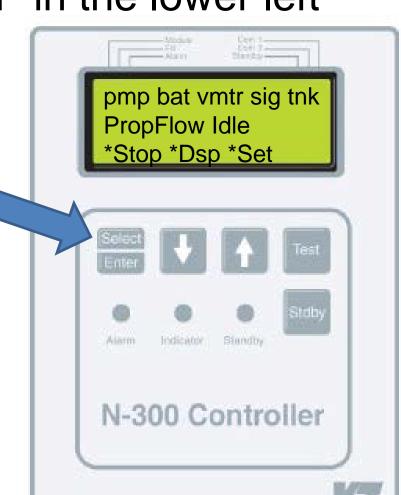


## Close V8 at the Pipeline

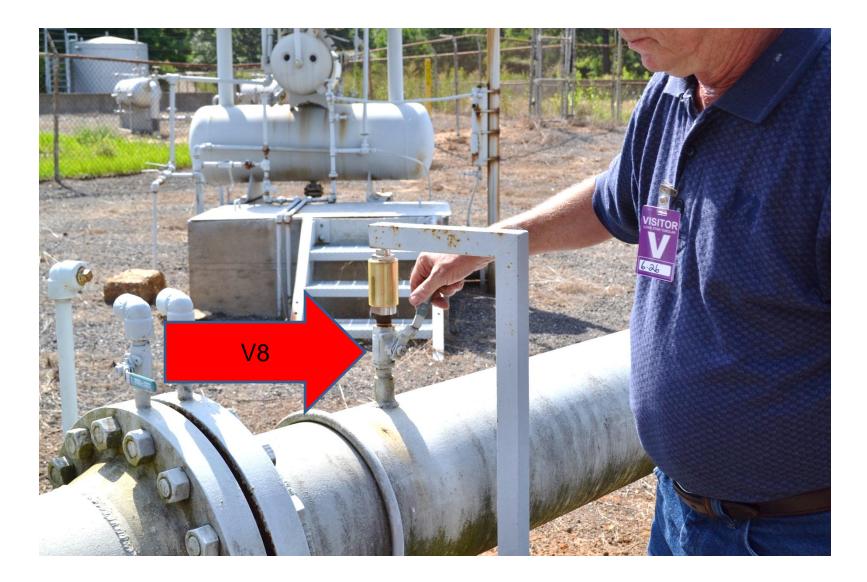

## Close V6 on the Expansion Tank



# Normal Expansion Tank Pressure (25 Psig)

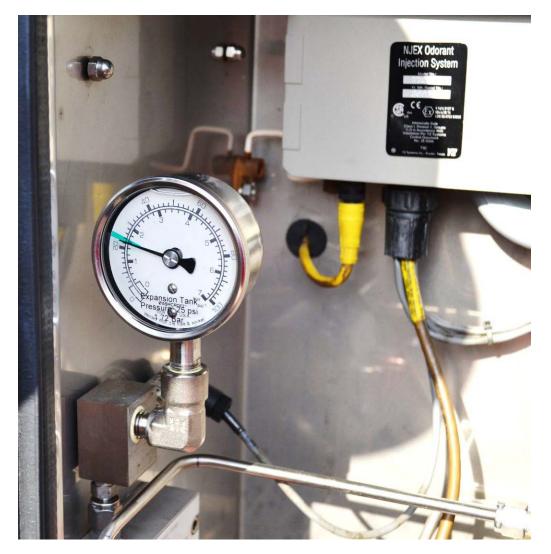

#### Open V4 to Raise Expansion Tank Pressure to 50-55 psig



#### **Elevated Expansion Tank Pressure**




## **Observe Meter Level on Display**




## Open V2



## Observe Meter Level on Display Until Empty

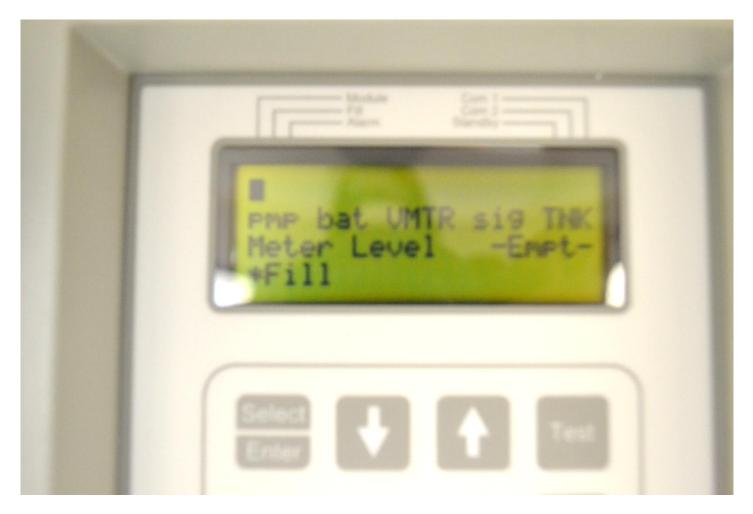

## Bulk Odorant Storage Pressure Gauge will Begin Fluctuating When The Verometer (Meter Level) is Empty.

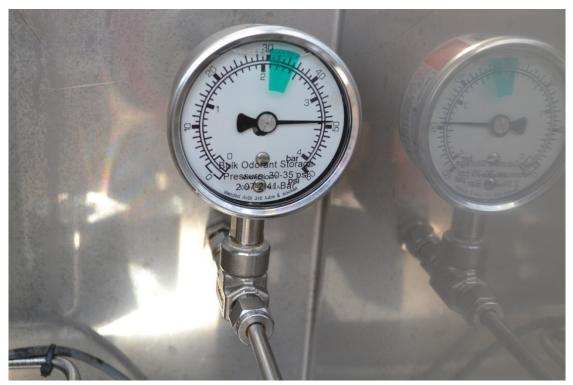

## Close Odorant Supply V15 on the Bulk Tank or V17 if equipped (std. in Poly-Fiber Enclosure).



#### Vent Expansion Tank to Zero PSI.

• Best Practice...Connect Flare to V5 Vent



Locate the Flare in a Safe Area, Open V5 and Ignite The Flare Until The Expansion Tank Pressure reaches Zero PSIG



## V2, V3 & V5 Should Be Open During Service Procedures

 Proceed to Specific Service/Maintenance Procedure